

INSTALLATION GUIDE:

WALL LIGHT
990.0348.01



IMPORTANT:

The luminaire must not be covered by any debris or insulating material. Ensure there is a minimum of 50 mm airspace around the luminaire and control gear. Electrical termination must be carried out by a qualified electrician in accordance with the latest edition of IEE wiring regulations BS7671.

PLEASE RETAIN THIS GUIDE FOR FUTURE REFERENCE AND RECYCLE PACKAGING.

A

ISOLATE MAINS SUPPLY BEFORE COMMENCING INSTALLATION

- Unscrew and remove the two screws from top of fitting as indicated (1).
- Carefully remove the diffuser.

B

Cable Entry Point

- Mark mounting dimensions on wall in desired location as indicated (1), note cable entry point.
- Drill mounting holes.
- Screw in suitable fixings (not supplied) leaving a 5 mm gap from wall to head of screw.
- Feed mains supply through the hole on the fitting (2).
- Place fitting on mounting surface by slotting the key holes on the fitting to the screws on the wall.
- Tighten screws until fitting is secure to wall.

C

- N** - NEUTRAL
- ⏚** - EARTH
- L** - LIVE (switched)
- N** - NEUTRAL
- ⏚** - EARTH
- 1** - SWITCHED LIVE
- 2** - PERMANENT LIVE
- D1** - DALI +
- D2** - DALI -

- Connect mains supply to terminal block.
- For switch dim link D2 to N, connect D1 to mains supply via a push to make retractive switch.

D

- Replace diffuser on to the fitting at a 45° angle so it goes under the lip of the fitting as shown, then lower rest of the diffuser into place (1).
- Re-fit screws on to fitting and diffuser as before until secure (2).

REINSTATE MAINS SUPPLY