

INSTALLATION GUIDE:

IP65/ADJUSTABLE LINEAR LED DOWNLIGHT
990.0359.01



IMPORTANT:

The luminaire must not be covered by any debris or insulating material. Ensure there is a minimum of 50 mm airspace around the luminaire and control gear. Electrical termination must be carried out by a qualified electrician in accordance with the latest edition of IEE wiring regulations BS7671.

NOTE: THE LED MODULES IN THIS LUMINAIRE ARE NON-USER REPLACEABLE.

PLEASE RETAIN THIS GUIDE FOR FUTURE REFERENCE AND RECYCLE PACKAGING.

A



ISOLATE MAINS SUPPLY BEFORE COMMENCING INSTALLATION


- **5 Optic** - cut a 183 x 70 mm rectangular hole at the desired location on a smooth flat surface.

183 x 70 mm cut out

- **10 Optic** - cut a 339 x 70 mm rectangular hole at the desired location on a smooth flat surface.


339 x 70 mm cut out

B

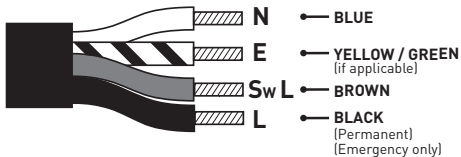


- Connect the luminaire to the mains supply using a terminal block (not supplied) compliant with the requirements of EN60998-2-1 or 2-2.
- For ECO dimming wiring see instruction leaflet **990.0009.01**.

C

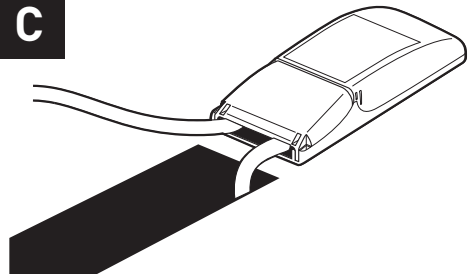


- Feed the driver into the ceiling void, ensuring it is not covered by any debris or insulating material and is correctly positioned.

D

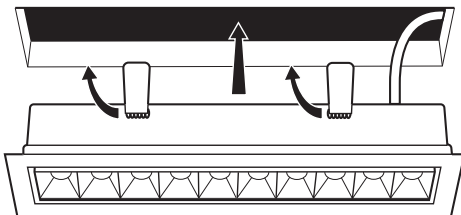

- Squeeze ceiling springs and push the luminaire into the ceiling void.
- Once in place make sure the luminaire is secure in ceiling.

E

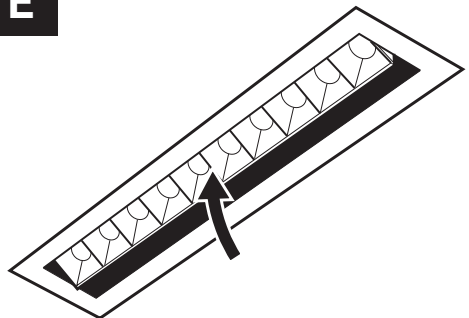

- Tilt the luminaire head to the required position by pushing in the centre. (Not IP65 Version)



REINSTATE MAINS SUPPLY