

INSTALLATION GUIDE:

LED DOWNLIGHT
990.0386.01



IMPORTANT:

The luminaire must not be covered by any debris or insulating material. Ensure there is a minimum of 50 mm airspace around the control gear. Electrical termination must be carried out by a qualified electrician in accordance with the latest edition of IEE wiring regulations BS 7671.

NOTE: THE LED MODULES IN THIS LUMINAIRE ARE NON-USER REPLACEABLE.

PLEASE RETAIN THIS GUIDE FOR FUTURE REFERENCE AND RECYCLE PACKAGING.


A ISOLATE MAINS SUPPLY BEFORE COMMENCING INSTALLATION

- Referring to the chart below, cut the appropriate size hole at the desired location using a hole saw.

	Bezel size	Cut-out size
	ø70 mm	ø60 mm
	ø80 mm	ø70 mm
	ø85 mm	ø80 mm
	80 x 80 mm	ø70 mm

B


- Certain product variants may be supplied with an LED driver featuring an adjustable output via DIP switches under the terminal covers.
- Any adjustment must be made before the luminaire is connected to the mains supply.
- Please refer to the diagram printed on the driver cover for the relevant settings.

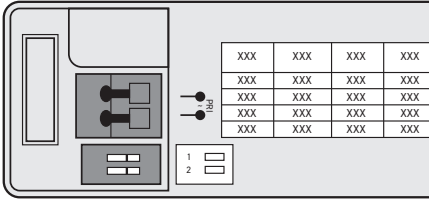

XXX	XXX	XXX	XXX
XXX	XXX	XXX	XXX
XXX	XXX	XXX	XXX
XXX	XXX	XXX	XXX
XXX	XXX	XXX	XXX


C

- Connect the driver to the mains supply in accordance with the latest wiring regulations **BS 7671**.
- For ECO dimming wiring see installation guide **990.0009.01**.

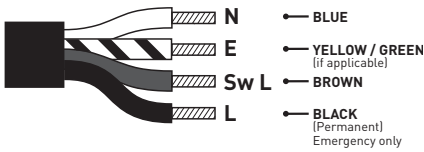

- N** — BLUE
- E** — YELLOW / GREEN (if applicable)
- SW L** — BROWN
- L** — BLACK (Permanent Emergency only)


- Feed the driver into the ceiling void ensuring it is not covered by any debris or insulating material and is correctly positioned. Driver may vary according to specification.

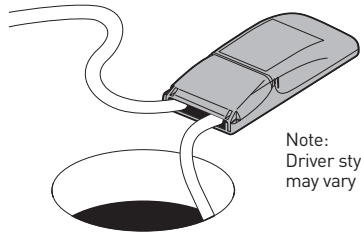

Note: Driver style may vary

D

- 1 Push back ceiling springs.
- 2 Install luminaire.

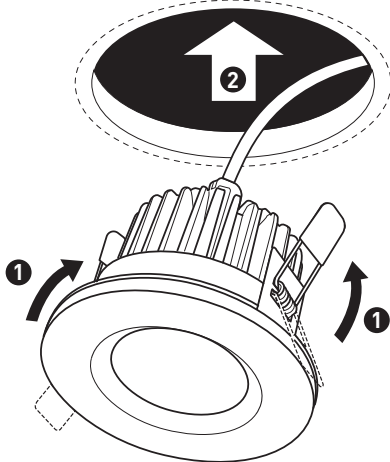

Note: Luminaire style may vary

REINSTATE MAINS SUPPLY