

INSTALLATION GUIDE:

LED DOWNLIGHT
990.0212.01



IMPORTANT:


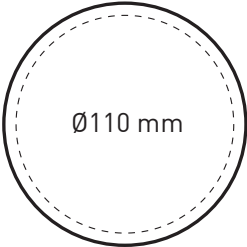

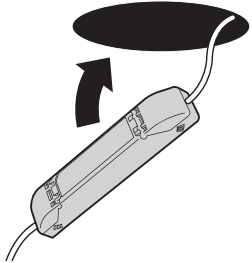
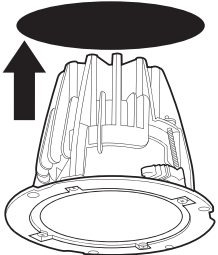
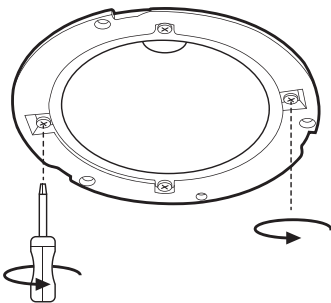
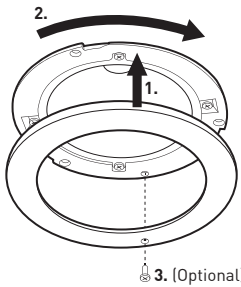

The luminaire must not be covered with any thermally insulating material.

This product contains a light source of **energy class D**. Please refer to relevant product technical data sheet for further information.

The LED module in this luminaire is not replaceable. When the light source reaches its end of life, the whole luminaire must be replaced.

PLEASE RETAIN THIS GUIDE FOR FUTURE REFERENCE AND RECYCLE PACKAGING



<p>A  ISOLATE MAINS SUPPLY BEFORE COMMENCING INSTALLATION</p>  <ul style="list-style-type: none">- Cut a 110 mm circular hole at desired location	<p>B</p>  <ul style="list-style-type: none">— BLUE— YELLOW / GREEN (if present)— BROWN - SWITCHED— BLACK - UNSWITCHED (Permanent) Emergency only <ul style="list-style-type: none">- Connect luminaire to mains supply using a terminal block (not supplied) compliant with requirements of EN60998-2-1 or 2-2.- For Touch & Dim or DALI wiring, see installation guide 990.0009.01.
<p>C</p>  <ul style="list-style-type: none">- Install driver into ceiling void.	<p>D</p>  <ul style="list-style-type: none">- Insert luminaire into cut-out, ensuring 50mm minimum air space around heatsink & driver. Luminaire must not be covered with any debris or insulating material.
<p>E</p>  <ul style="list-style-type: none">- Turn two fitting screws clockwise to secure luminaire into ceiling. DO NOT USE POWER TOOLS.	<p>F</p>  <ul style="list-style-type: none">- Install twist and lock bezel complete with any accessories.- Optional anti-tamper bezel - Install twist & lock bezel, ensuring screw holes are aligned, and fit security screw. <p> REINSTATE MAINS SUPPLY</p>