

# INSTALLATION GUIDE:

LINEAR LED DOWNLIGHT  
990.0358.01



## IMPORTANT:

The luminaire must not be covered by any debris or insulating material. Ensure there is a minimum of 50 mm airspace around the luminaire and control gear. Electrical termination must be carried out by a qualified electrician in accordance with the latest edition of IEE wiring regulations BS7671.

PLEASE RETAIN THIS GUIDE FOR FUTURE REFERENCE AND RECYCLE PACKAGING.

### A



## ISOLATE MAINS SUPPLY BEFORE COMMENCING INSTALLATION


- **5 Optic** - cut a 166 x 41 mm rectangular hole at the desired location.

166 x 41 mm cut out

- **10 Optic** - cut a 323 x 41 mm rectangular hole at the desired location.


323 x 41 mm cut out

### B




- Connect the luminaire to the mains supply using a terminal block (not supplied) compliant with the requirements of EN60998-2-1 or 2-2.
- For ECO dimming wiring see instruction leaflet **990.0009.01**.

### C

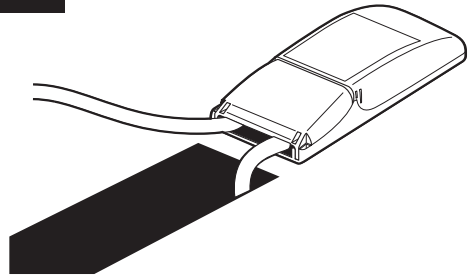

- Feed the driver into the ceiling void, ensuring it is not covered by any debris or insulating material and is correctly positioned.

### D

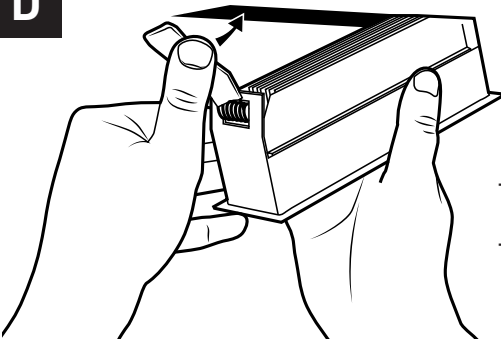

- Squeeze ceiling springs and push the luminaire into the ceiling void.
- Once in place make sure the luminaire is secure in ceiling.



## REINSTATE MAINS SUPPLY